
Assembly Guide

Case View

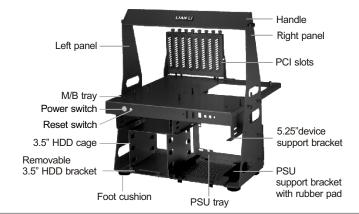

Case components



Left panel Right panel



3.5" HDD cage



Removable 3.5" HDD bracket



support bracket with rubber pad





5.25"device support bracket



* Extra quantities are spare parts.


Hardware list

O. Screw (4) for PSU mounting **1** В D Thumb screw (14) C Screw (43) for CD-ROM / PCI bracket / M/B assembling Screw 3x6mm (6) (4) for PSU support bracket (2) for optional (USB3.0) Rubber ring (12) Hex wrench (1) Ε \bigcirc F for M/B stand-off for HDD Screw (2) for bottom panel Spring (2) for bottom panel Stand off (20) Screw 3x4mm (17) **a** Н G for M/B assembling for handle Screw (12) for HDD Rubber pad (2) K Foot cushion (4)

Bottom panel



Bottom panel with rubber cushion

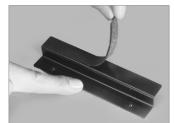

PSU support bracket with rubber pad



for PSU support bracket

Use " H " screw to secure bottom panel on the right panel




Use " H " screw to secure bottom panel on the left panel



Use " A " screw to secure PSU support bracket on the right panel



Use " A " screw to secure PSU support bracket on the bottom panel

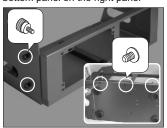


Use " B " screw to secure PSU tray on the L/R panel, and "H" screw to secure bottom panel




Place the PSU on the PSU tray, and use "C" screw to secure the PSU.



Place the " I $\,$ / J " screw/spring on the bottom panel fix points

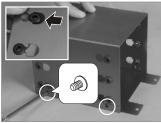

Place the " E " rubber ring on the HDD cage fix points, and use " ${\bf K}$ " screw to secure to secure removable 3.5" HDD bracket on the 3.5" HDD cage

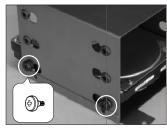

Place the HDD into the HDD cage,



Slide the HDD cage into the bottom panel, and use "B" screw to secure




Use " **D** " screw to secure CD-ROM support bracket on the CD-ROM




Place the CD-ROM below the M/B tray, and use " D " screw to secure



Use " B " screw to secure M/B tray on the left/right panel

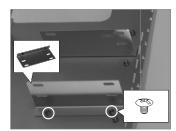


Place the 2.5" HDD bracket on the M/B tray, and use " \boldsymbol{D} " screw to secure

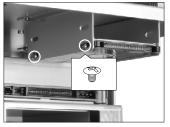


Place the HDD on the 2.5" HDD bracket, and use " D " screw to secure




Place the " **G** "(stand-off 20pcs) on the M/B tray fix points.
Tool: " **F** "(Hex wrench)

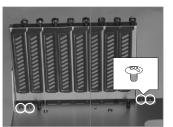

Secure the PCI slots bracket on the M/B tray with " D " screw 6pcs



Place the M/B on the stand-off and fastened by the "**D**" screws

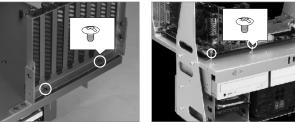


ATTENTION

You can adjust the height of M/B by using "G" (stand-off 9pcs)






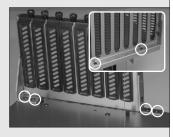



Assemble handle1 and handle 2 altogether

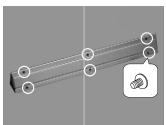

Fasten " H " screw



Combine L/R panel with "B" screw.

OPTION KITS:



Multi-Media I/O Ports Upgrade Kit(USB3.0)



120mm /140mm fan Cooler

